cura1.com
1300 12 2273

Quick Start Guide

cura1 transmitters:

#2584 Call Button
#2593 Door Contact
#2592 Motion Sensor
#2601 Plug in Adaptor
#2619 Cordless Pad Transmitter Insert
#2585 Reset Button

Optional Accessories (Sold Seperately)


#2600 - 30 Channel Display Panel


#2581 Pager With Numeric Display


#2582 Pager


#2404 A/C adaptor

These transmitters are designed to work in conjunction with the *#2600 ActiveAlert Display Panel*. Please consult the #2600 Quickstart User Manual for important programming & setup instructions.



Setup & Pairing a transmtter with a #2600 ActiveAlert Display Panel

While the *#2600 ActiveAlert Display Panel* is in programming mode, activate one of the following Wireless Alarm Transmitters:



- **2584 Call Button** - insert the supplied battery into the transmitter case then press the call button on the front to activate. The red light will illuminate on the transmitter to confirm that it is transmitting




- **2592 Motion Sensor** - insert 3 AA batteries into the sensor case, or apply 12Vdc using a #2601 A/C Adaptor. Turn on the motion sensor using the "On/Off" switch at the front. Each time the motion sensor detects motion it will transmit. The green light will illuminate on the front to confirm that it is transmitting. Make sure that the antenna is fully extended. Remember to turn off the movement sensor once pairing is complete and until all programming is finished so that it will not interfere with the other devices.



- **2593 Door Contact** - insert the supplied battery into the transmitter case then separate the magnetic contact from the transmitter. The red light will illuminate on the transmitter to confirm that it is transmitting. Please note that the magnetic contact will only work on one side of the transmitter. Make sure that the antenna is fully extended.



- **2601 Plug In Transmitter** - insert the supplied battery into the transmitter case then plug the adaptor into the "Nurse Call" socket of the Bed / Chair Monitor. Press and release the bed or chair pad or step on the floor mat. The red light will illuminate on the transmitter to confirm that it is transmitting. Make sure that the antenna is fully extended.

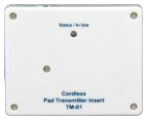

- **2619 Cordless Pad Transmitter** Insert turn on the insert then plug the insert into the cordless bed or chair pad or floor mat and then press and release the pad or step on the floor mat. The red light will illuminate on the insert to confirm that it is transmitting.



- **2585 Reset Button** - insert the supplied battery into the transmitter case then press the call button on the front to activate. The red light will illuminate on the transmitter to confirm that it is transmitting.
  It can be added to any ID number and will then reset any alarms that may be active on the Display panel. (The same as pressing the "Reset" button 7 on the Display Panel.)

Please consult the #2600 Quickstart User Manual for further instructions on how to program the #2600 ActiveAlert Display Panel to work with these devices.