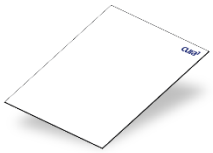
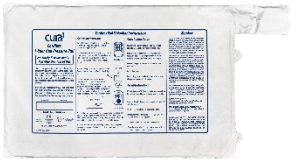
• Monitor one or multiple participants: • Heart Rate • Respiration Rate • Scheduled Turn Overs • Life Signs Critical Alarm • Movement Alarm • Wi-Fi Signal Lost • Incontinence • Out of Bed • In Bed – All OK		Self Reset	**5000 ENSIGN** Suitable for **What's in the box:** 1 x Bed Sensor Pad 1 x Wi-Fi Module 1 x 5vDC Plug Pack 1 x Connecting Cable 1 x BSP Attachment Kit	
				12 Month Warranty
5000/C*	Bed Sensor Pad (BSP)			Located UNDER MATTRESS. Monitors health & wellbeing information. Sends notification for key health events to authorized users. *5000C = Compensated model.
5001	ENSIGN External Pressure Compensator (Pull On)			For use with 5000 Bed Sensor Pad to compensate for unusual mattress configurations.
5009	ENSIGN Wi-FI Module			Connects to ENSIGN 5000 Bed Sensor Pad (BSP). Allows ENSIGN BSP to use local WI-FI network for data communications.
5010	ENSIGN 4G Module			Connects to ENSIGN 5000 Bed Sensor Pad (BSP). Allows ENSIGN BSP to use 4G network for data communications.
5002	ENSIGN Nurse Call Pendant	✓		Initiates assistance required when BLUE button is pressed. Reset by double pressing BLUE button at point of call.
4021	Incontinence Bed Pad 30 Days (780 x 110)	✓		Sends INCONTINENCE notification when moisture is detected. Resets INCONTINENCE when dry.
2407	5V Plug Pack			Plug Pack included with 5000 Bed Sensor Pad.
5020	ENSIGN Pager Interface			Connects directly to PC running ENSIGN. Sends a wireless signal to the LED Pager whenever there is a key notification in ENSIGN.

CM021-4

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.

5021	ENSIGN High Level Interface			Relay key health event notifications to 3rd party systems such as LAS or any other software capable of deciphering JavaScript Object Notation (JSON) via a http Connection.
2533	4 Way Relay Board			Provides a low-level hardwired interface to third party equipment, can be wired to trigger security systems, CCTV, Nurse Call Systems, Lights & Buzzers, and anything that accepts a relay input. This board provides either an NC or NO output (selected by hardware) that provides a momentary 5 second relay activation. Re-alarm time can also be configured in the software.
	PC/Notebook			Used to display notifications received from ENSIGN. Requires a Wi-Fi connection to access a portal/browser.
	Tablet			Used to display notifications received from ENSIGN. Requires a Wi-Fi connection to access a portal/browser or the ENSIGN Application.
	Smartphone / Mobile Phone			Used to display notifications received from ENSIGN. Requires a Wi-Fi connection to access a portal/browser or the ENSIGN Application.
5022	Backing Board			800 x 700 board for use with the 5000 ENSIGN BSP when the base of the bed is slatted or requires additional support for the BSP.
5023	ENSIGN Computer Speakers			For use with the computer running ENSIGN to enable audible alarms & notifications.
5024	ENSIGN Headset Adaptor 3.5mm to USB Sound Card			For use with the computer running ENSIGN to connect external speakers if computer does not have a 3.5mm speaker output.

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.

2549	Cordless Multiport Expander with Bracket Mount			Plugs into ENSIGN BSP to allow connection to various cura¹ cordless devices. Works with up to 5 cordless devices – max 2 pads / mats.
3502	ActiveCare Wireless Handset			Sends message when RED button pressed, triggering Includes wireless reset button to reset any notification triggered by a wireless peripheral device. *Requires 2549 Multiport Expander to integrate with ENSIGN*
2629	Cordless Bed Pad (760 x 500)			Located on TOP OF THE MATTRESS. Sends OUT OF BED message when getting out of bed, initiates a notification within ENSIGN (IPC). Resets OUT OF BED when back in bed or via wireless handset (3502). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2670	Pre-Alert Cordless Bed Pad (830 x 260)			Located on TOP OF THE MATTRESS. Sends OUT OF BED message when getting out of bed, initiates a notification within ENSIGN (IPC). Resets OUT OF BED when back in bed or via wireless handset (3502). *Requires 2549 Multiport Expander to integrate with ENSIGN*
3515	Cordless Under Mattress Bed Pad (830 x 260)			Located on UNDER THE MATTRESS. Sends OUT OF BED message when getting out of bed, initiates a notification within ENSIGN (IPC). Resets OUT OF BED when back in bed or via wireless handset (3502). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2630	Cordless Chair Pad (380 x 250)			Sends OUT OF CHAIR message when getting out of chair, initiates a notification within ENSIGN (IPC). Resets OUT OF CHAIR when back in bed or via wireless handset (3502). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2691	Universal Chair Pad			Sends OUT OF CHAIR message when getting out of chair, initiates a notification within ENSIGN (IPC). Resets OUT OF CHAIR when back in bed or via wireless handset (3502). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.

2624	Cordless Floor Mat (1220 x 620)			Sends message when stepped on to Multiport Expander, initiates a notification within ENSIGN (IPC). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2671	Universal Single-Fold Floor Mat (900 x 600)			Sends message when stepped on to Multiport Expander, initiates a notification within ENSIGN (IPC). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2672	Universal Dual-Fold Floor Mat (1190 x 600)			Sends message when stepped on to Multiport Expander, initiates a notification within ENSIGN (IPC). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2692	Universal Floor Mat (1220 x 610)			Sends message when stepped on to Multiport Expander, initiates a notification within ENSIGN (IPC). *Requires 2719 Transmitter to function and 2549 Multiport Expander to integrate with ENSIGN*
2719	Cordless Pad Transmitter			Required by Cordless Pads/Mats, sends a signal to the 2549 Multiport Expander.
2558	Wireless Waterproof Call Button w/ pullcord			Initiates notification when RED button is pressed or cord is pulled. Includes wireless reset button to reset any notification triggered by a wireless peripheral device. *Requires 2549 Multiport Expander to integrate with ENSIGN*
2599	Wireless SOS Call Button			Initiates notification when RED button is pressed. *Requires 2549 Multiport Expander to integrate with ENSIGN*
2721	iBeam			Sends notification when patient breaks the beam. Features a narrow detection zone to reduce false alarms. Reset via wireless handset (3502). *Requires 2549 Multiport Expander to integrate with ENSIGN*
2595	Wristband Alarm Transmitter			Sends notification when button is pressed. Reset via wireless handset (3502). *Requires 2549 Multiport Expander to integrate with ENSIGN*

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.

2588	Personal Emergency Transmitter (PET)			Sends notification when button is pressed. Reset via wireless handset (3502). *Requires 2549 Multiport Expander to integrate with ENSIGN*
3503	Wireless Door Contact			Sends notification when button is pressed or door is opened. Reset via wireless handset (3502). *Requires 2549 Multiport Expander to integrate with ENSIGN*
2698	Universal Transmitter	✔		Turn any third-party alarm device into a wireless transmitter. Can also be used as a wireless door contact. *Requires 2549 Multiport Expander to integrate with ENSIGN*
2406M	cura1 6V Plug Pack			Plug Pack with 1.3mm connection tip for use with 2549.
2547	POCSAG VHF Paging Transmitter			Programable power output. Programable operating frequency. Over temperature cutout. Connects directly to IP Network ethernet point. Receives ENSIGN alarms and sends alphanumeric alarm messages to POCSAG Pagers.
2548	POCSAG VHF Alphanumeric Pager			4 line, 84 character display. Easy to read back lit display. Time & date display 12 or 24 hour clock. Message time & date stamping. Receives alphanumeric alarm messages from 2547 POCSAG VHF Paging Transmitter.
2512	LED POCSAG Display Single Sided			Bright LED display with high visibility, adds an extra safety measure assuring that staff will see an alarm / call.
2513	LED POCSAG Display Double Sided			Bright LED display on both sides with high visibility, adds an extra safety measure assuring that staff will see an alarm / call.
2404	cura1 12V Plug Pack			Power Adaptor for 2547 Paging Transmitter, 2512 LED Single Sided POCSAG Display and 2513 LED Double Sided POCSAG Display.

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.

2730	SnapOn Bed Pad 1 Year (800 x 255)			Place **ON TOP OF THE MATTRESS** Sends **OUT OF BED** message when getting out of bed. Resets **OUT OF BED** when back in bed or via connected monitor. ****Requires 2732 SnapOn Pad Transmitter to function****
2731	SnapOn Chair Pad 1 Year (420 x 180)			Sends **OUT OF CHAIR** message when getting out of bed. Resets **OUT OF CHAIR** when back in bed or via connected monitor. ****Requires 2732 SnapOn Pad Transmitter function****
2732	SnapOn Pad Transmitter			Required by SnapOn Pads. Sends a signal to the 2549 Multiport Expander. ****Replaceable CR2045 battery.****
5050	ENSIGN Mobile Computer Handset			Access ENSIGN directly and on the go without a PC or smart device.

All radio frequency (RF) signal transmission and reception distances quoted are indicative only and based on testing carried out under ideal conditions. Actual transmission and reception distances may vary and be dependent on specific environmental conditions.