cura¹

3500R - ActiveCare Monitor



What's in the box?


2406 6 VDC Plug Pack


3504 Mounting Bracket


3500R ActiveCare Monitor


3 X AA Batteries


Quick Start User Guide


2642 Caregiver Reset Key

Compatible & Optional Accessories

All cura1 Cordless Pad / Mat Transmitters & Call Buttons

2900 DoorAlert Monitor, 2721 iBeam, 2698 Universal Transmitter, 3501 ActiveCare LCD Pager, 3503 Wireless Door Switch, 2406 Plug Pack 6 VDC, 2642 Caregiver Reset Key, 3504 ActiveCare Mounting Bracket

cura¹
10 Gray Street, Kilkenny South Australia 5009
www.cura1.com

1300-12-CARE (2273)

UM-051a

All our products are supplied with a full warranty and are guaranteed to be free from defects in material and workmanship.

OPERATION & ADDITIONAL CONFIGURATION

PTO for Quick Start Guide

Clearing a bed, chair or floor mat alarm

In an alarm condition the monitor will display the slot number and a device type LED will light up. This alarm condition will continue until one of the following events occurs:

- The patient or resident returns to the bed or chair.
- The caregiver resets the monitor. In this case, if the RESET button is pressed, then the alarm will silence but the alarm will still be visible on the display. To clear the alarm press and hold the RESET button until the display clears. The alarm has now been reset.

Device Type	Monitor Display During Alarm
Cordless Bed/Chair Pad	The Slot Number + PAD LED
Cordless Floor Mat	The Slot Number + PAD LED
Call Button	The Slot Number + CALL LED
Pendant	The Slot Number + CALL LED
DoorAlert System	The Slot Number + SENSOR/DOOR LED
Other Sensors	The Slot Number + SENSOR/DOOR LED

Alarm tone ("b") - There are two alarm tones that can be selected.

To change the alarm tone, place the monitor into ***programming mode****.

Apply a Caregiver Reset Key to the SELECT 1 application point until the tens digit displays a "b".

Apply the Caregiver Reset Key to the SELECT 2 application point to select either (tone) 1 or (tone) 2.

Call forwarding ("t") - Forward calls (alarms) to a 3501 ActiveCare Pager.

Ensure pager/s setting "dS=OFF" (refer to pager's instructions).

Place the monitor into ***programming mode****.

Now apply a Caregiver Reset Key to the SELECT 1 application point until the first digit displays a "t".

Apply the Caregiver Reset Key to the SELECT 2 application point to select the setting from the table below:

Set t =	Call Forward Setting
0	Forwarding OFF
1	Not used
2	Not used
3	Signals to 3501 ActiveCare Pager



Programming mode** - Ensure the LOCK switch is OFF. Press & hold the PROGRAM button while simultaneously applying a Caregiver Reset Key to the SELECT 1 application point. The monitor will initiate a long beep and briefly display "PP" to confirm that it is in ***programming mode.

To exit ***programming mode*** press & hold the PROGRAM button until a long beep is heard & the display turns off. The monitor will also automatically exit ***programming mode*** after ~ 3 minutes of inactivity.

Please refer to the full technical manual or your cura¹ distributor, for setup details for the following features:

Area code ("A") - If several monitors are being used in a facility, then setting an Area Code will ensure pagers only receive alarms from their specified area.

Pause setting ("P") - Allow staff to pause all pad alarms for a designated time period.

Pad alarm delay setting ("d") - Automatically delay a pad alarm for a designated time period.

Pager code ("C") - for group paging.

QUICK START GUIDE

3500R - ActiveCare Monitor quick setup for use with cura[1] cordless pads, mats, buttons and sensors.

Step 1

Insert 3 x AA Alkaline Batteries and connect the 2404 Plug Pack.

Use a Phillips screwdriver to open the battery compartment and insert three new AA batteries (supplied).


Replace cover and secure the screw.

Connect the supplied plug pack & switch the power on. Ensure the plug pack is used at all times during operation. It is strongly recommended to also have batteries installed. Batteries must be removed from the device while it's in storage.

Note: Whenever the plug pack or battery power is connected the monitor will beep once to confirm that power is connected.

Back View

Use screwdriver, (accepts both Phillips or flat head) to undo screw & slide battery cover UP to open.

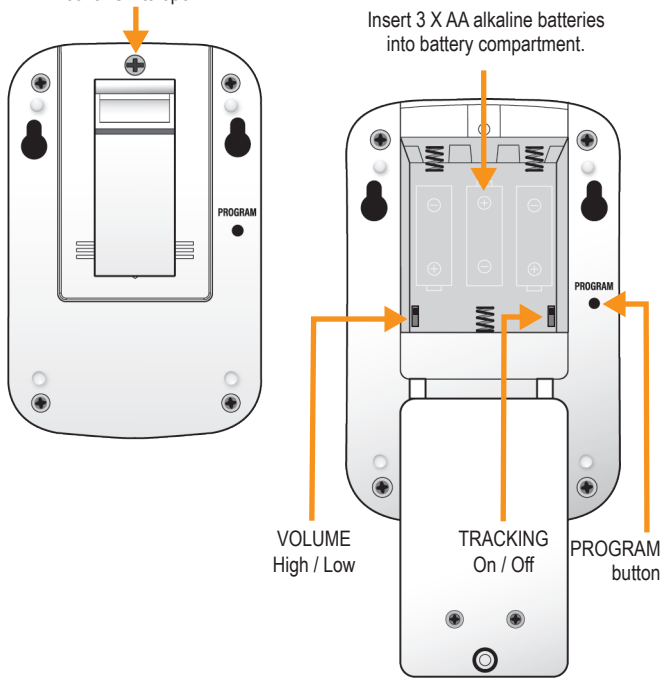

Step 2

Mounting

The monitor unit can be fixed to a wall using the supplied mounting bracket. Optionally, the monitor can simply be placed directly on a table or desk.

Step 3

Pair cordless devices to a memory slot

1. Place monitor in *pairing mode* - Ensure the LOCK switch is OFF. Press and hold the PROGRAM button for approx 5 seconds. The monitor will initiate a long beep and briefly display "PP" to confirm that it is in ***pairing mode***. Now release the PROGRAM button. The monitor will display the first memory slot "01".

2. To select another memory slot - (from 01 to 60) you can use the SELECT 1 and SELECT 2 application points to increment the tens digit and the units digit respectively, until the desired memory slot has been selected.

3. Add a device to a memory slot - simply trigger an alarm on the device you want to add*. If successful the monitor will beep twice and the relevant device type indicator LED will illuminate.

4. Exit Pairing Mode - Press & hold the PROGRAM button until a long beep is heard & the display turns off. The monitor will also automatically exit pairing mode after ~ 3 minutes of inactivity.


***Note:** When adding a pad transmitter, turn the transmitter from OFF to ON for the pairing process (instead of creating an alarm condition with the pad or mat).

Note: Multiple device types can be added to the same memory slot - eg pad/mat, door sensor and call button.

Deleting wireless devices from a memory slot

Place monitor into ***pairing mode*** (see 3.1 above).

Use the SELECT 1 and SELECT 2 application points to scroll through the memory slots and once the desired slot is selected, hold RESET for approx 5 seconds. The device type indicator LED(s) turn off to indicate that the device(s) are no longer present in the memory.

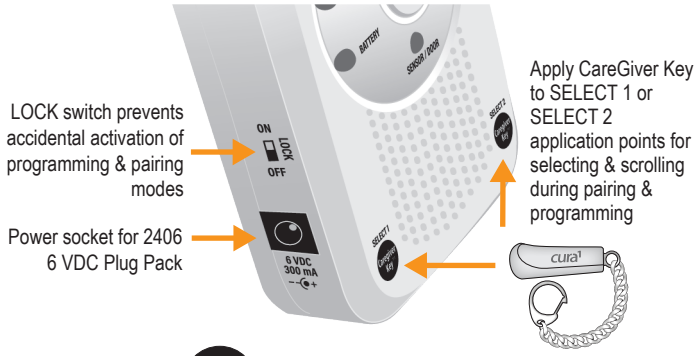

Step 4

Configuration - Track, Pause, Delay & Lock

Some of the following features may need to be set up or enabled, depending on your specific configuration requirements.

Tracking - Can be used to check that all paired cordless pad transmitters are still in range and communicating with the system. To enable tracking, slide the TRACKING switch to the ON position.

Alarm Forward - Alarms can be forwarded to a pager. For instructions, PTO and find ***Call forwarding to a pager***.

Lock - After programming is complete turn this to "On" to prevent accidental changes during normal usage.

Area, Pause & Delay - For information about these features, PTO.

Step 5

Test prior to use

Create an alarm condition for every device that is connected to the monitor and ensure the monitor responds correctly.

MORE INFORMATION

For detailed information of all 3500R monitor functions please refer to the full technical manual for this product or contact your cura[1] reseller.