cura1.com
1300 12 2273

2586 Cordless Hallway Alarm

Quick Start Guide

1 X 2586 Cordless Hallway Alarm

Optional Accessories (Sold Seperately)
#2584 Call Button
#2585 Reset Button
#2592 Motion Sensor
#2601 Plug In Transmitter
#2593 Door Contact
#2594 Hard Wired Input Transmitter
#2662 Cordless Bed Pad with 2619 Transmitter
#2661 Cordless Chair Pad with 2619 Transmitter
#2663 Cordless Floor Mat with 2619 Transmitter
#2619 Cordless Pad Transmitter
#2404 Plug Pack

2586 Cordless Hallway Alarm

Audible & visual alarm annunciator. Up to 30 transmitters can be programmed into the Hallway Alarm. Powered by battery and mains A/C adaptor.

Each Hallway Alarm can be paired with up to 30 unique Alarm Transmitter ID numbers. It will ignore any Alarm Transmitter ID numbers that have not been paired with it.

Pairing the Hallway Alarm to a Transmitter

Apply power to the Hallway Alarm Unit (3 x C-sized batteries and/or #2404 AC adaptor.)

Using a small screwdriver (or paper clip) **press and hold the record switch** at the rear of the unit until two LEDs illuminate under the red plastic cover to indicate that the unit is in programming mode.

Release the record switch.

(Note: to completely erase all previously paired Alarm Transmitters from the Hallway Alarm unit memory continue to press and hold the record switch until the two illuminated LEDs flash and then switch off.)

Now **activate the Alarm Transmitter** you wish to pair with the Hallway Alarm unit and the two LEDs will flash to confirm that the Alarm Transmitter has been paired.

Continue this process until all desired transmitters are paired.


To exit programming mode wait 20 seconds and the Hallway Alarm unit will **automatically exit programming mode**.

If one of the paired Alarm Transmitters is now activated the Hallway Alarm will give either a momentary "Chime" or a latching "Alarm" sound, depending on the switch setting on the side of the unit. Note: there is also a "Lo Mi Hi" on the side of the unit.


To reset the latching "Alarm" sound, manually set the “Alarm mode” switch to “Off”. Alternatively you can pair a **2582 Reset Button** with the Hallway Alarm Unit using the same procedure above. This Reset Button is then used to reset the “Alarm.”




Front view

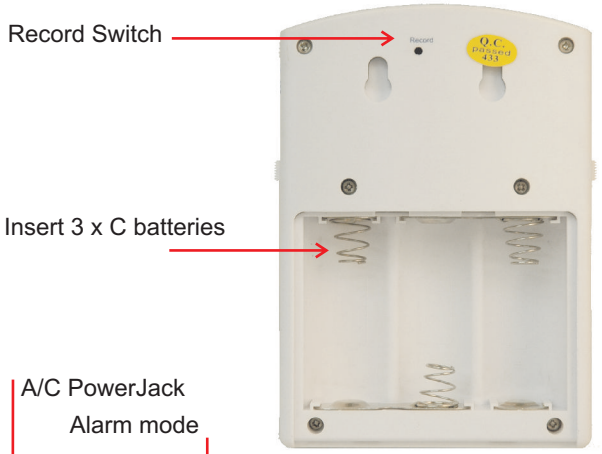

Rear view

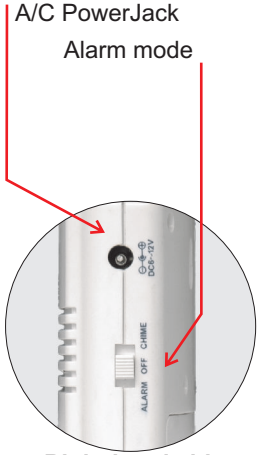

Right hand side

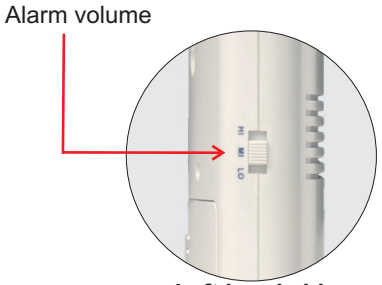

Left hand side