2703 - Wireless Output Falls Monitor



What's in the box?



2703 Wireless Output Falls Monitor | 2742 Soft Monitor Cover | 2699 Fixing Strap | 3504 Mounting Bracket | 3 X AA Batteries | QuickStart User Guide

Compatible & Optional Accessories

All Premium bed / chair pads & floor mats.

All Universal bed / chair pads & floor mats (if using a USB to RJ10 connector cable)

2406 Plug Pack 6 Vdc, 3501 ActiveCare LCD Pager, 3508 LED Pager, 2561 Wireless Indicator Light, 3504 Mounting Bracket, 2742 Soft Monitor Cover, 2699 Fixing Strap

Nurse Call Cables: 2643, 2646, 2493, 2461, 2460

cura¹
10 Gray Street, Kilkenny South Australia 5009
www.cura1.com

1300-12-CARE (2273)

UM-050

All our products are supplied with a full warranty and are guaranteed to be free from defects in material and workmanship.

OPERATION

Volume Adjustment

There are 4 volume settings (including silent). Hold the RESET button while pressing PAUSE to cycle between these settings.

Pad / Mat Alarms

When in an alarm state, the monitor's RESET button will flash and an audible alarm will sound (unless the volume is set to silent).

Clearing an Alarm

Press the RESET button on the monitor.

If a bed or chair pad is being monitored, the monitor alarm will automatically reset when the monitored person returns to the bed or chair (pressure is re-applied to the pad).

Pad Lost

When the connection to a pad or mat is lost the "PAD LOST" LED will flash and an audible chirp will sound every second. Check that the cable connections between the pad or mat and the monitor are secure. When connection is re-established the LED and audible alert will cease.

Pause

Pressing the PAUSE button will supress the monitor's alarm for approx 45 seconds. If the monitored person leaves the bed or chair during that time then the monitor will not alarm. The monitor will be re-armed when the monitored person returns to their bed or chair (pressure is applied to the bed or chair pad again).

Low Battery

When the LOW BATTERY LED blinks and chirps (every 3 seconds), its time to replace the batteries in the monitor.


AC/NC Lost

When either the external power or a nurse call cable is disconnected then the monitor's AC/NC LOST LED will blink and a chirp will sound every 3 seconds.


MORE INFORMATION

For detailed information of all 2703 monitor functions please refer to the full technical manual for this product or contact your cura¹ distributor.

Front View

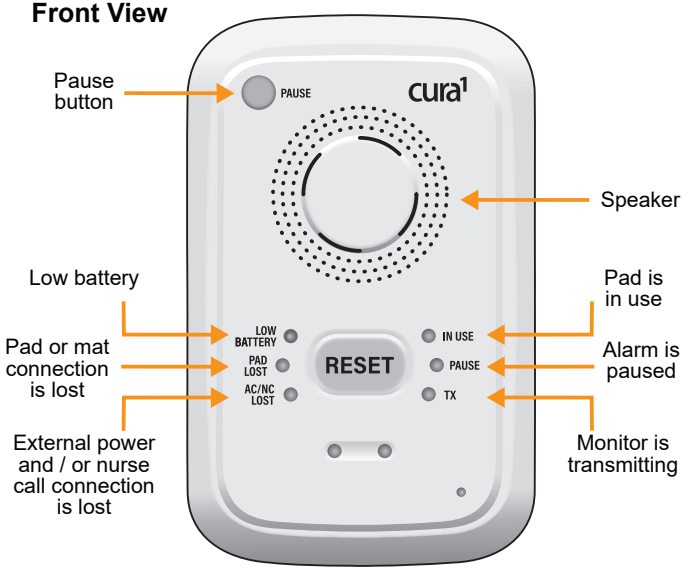

Back View

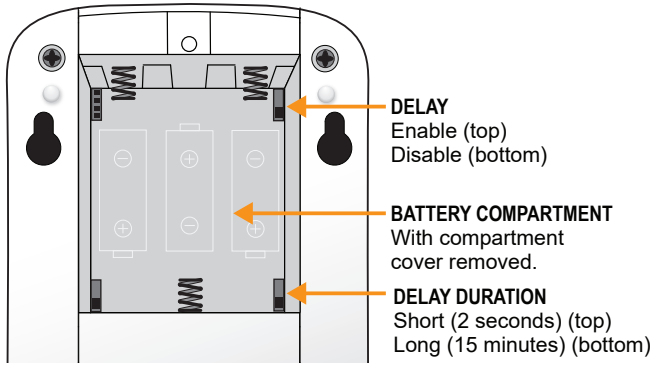

Delay Settings

Alarm delay setting switches are located in the battery compartment and the default delay setting is "DISABLE".

To provide a 2 second delay from when pressure is released from the bed or chair pad to when the alarm is activated, change the DELAY switch to "ENABLE" and the DELAY DURATION setting to "SHORT". This helps to prevent false alarms when a monitored person adjusts their position in the bed or chair.

The long delay (15 mins) could be used to enable a bathroom break without triggering an alarm.

QUICK START GUIDE

2703 - Wireless Output Falls Monitor quick setup for use with cura[1] Premium or Universal pads & mats


Step 1

Insert 3 x AA Alkaline Batteries.

The 2703 Wireless Output Falls Monitor is designed to work with alkaline batteries equivalent to those originally supplied with the device.

Operable alkaline batteries must be installed in the device at all times during operation. Batteries must be removed from the device while it's in storage.


Insert 3 x AA batteries (supplied) and resecure the battery compartment cover.

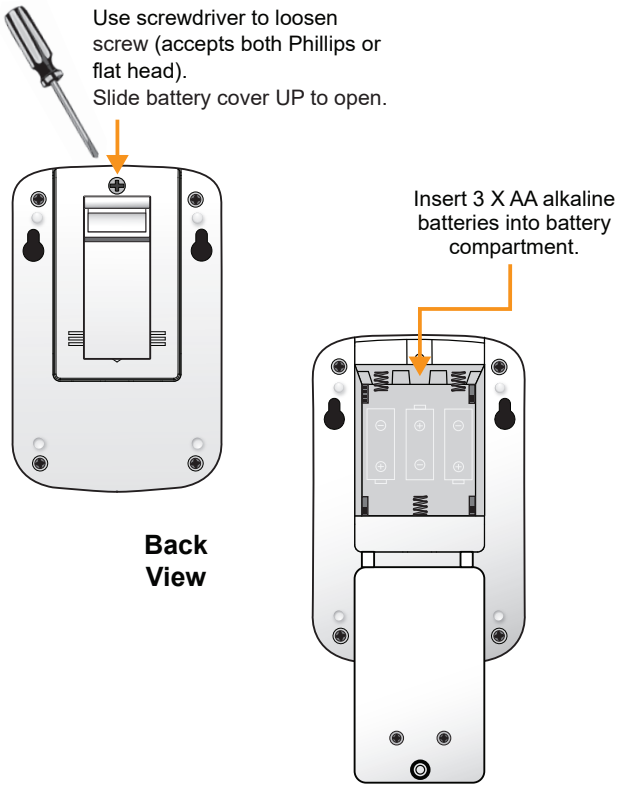

Step 2

Plug in a Premium or Universal pad or mat.


Plug the RJ10 connector from a Premium or Universal pad or mat into the bottom of the monitor and loop the cord through the strain relief recess.

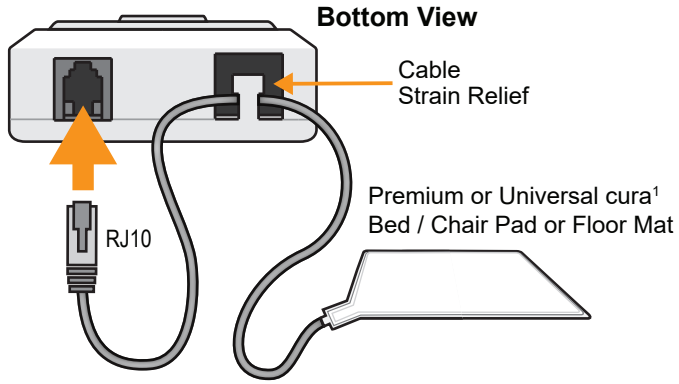

Step 3


(Optional) Plug in an external power supply.

If you are only using battery power then skip to Step 4.

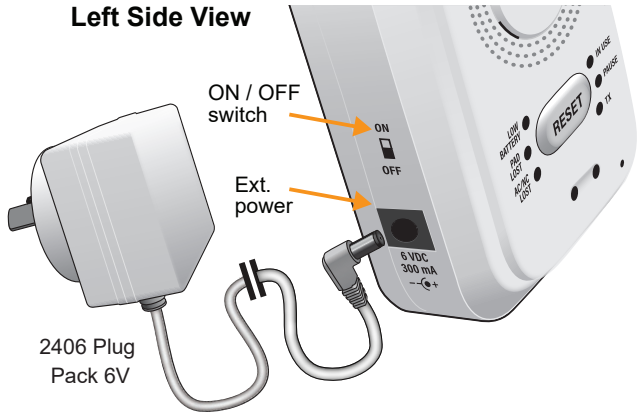

Step 4

(Optional) Connect to a nurse call system.

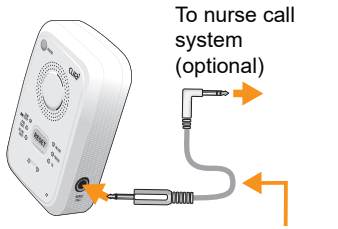

See a list of compatible cables under *Compatible & Optional Accessories* in the front panel of this guide.

Step 5

Switch ON the monitor.

Locate the ON / OFF switch on the monitor's left side and slide it to ON. The monitor emits a long beep when switched on.

Step 6

(If required) pair the monitor with a cordless receiver such as a 3508 LED Pager.

If you are using a cordless receiving device such as a pager, then the pager will need to be configured to receive signals from the monitor. This configuring process is called "pairing".

Please refer to the specific pairing instructions that came with your cordless receiver.

Step 7

Test operation.

Repeatedly trigger and reset alarms until you are certain that the system is operating correctly.

If you are using a cordless receiver such as a 3508 LED Pager then be sure to test reception in all the likely locations where the device will be used.

Test falls monitor prior to every use.

The range of wireless devices may vary and be dependent on your specifc environmental conditions.